




# Operating Instructions




## ***VACUUM CLEANER***

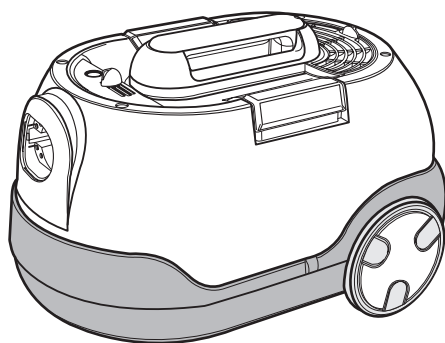


✧ Before operating this unit, please read the instructions carefully.

✧ Indoor use only.

# 1 ASSEMBLING THE CLEANER

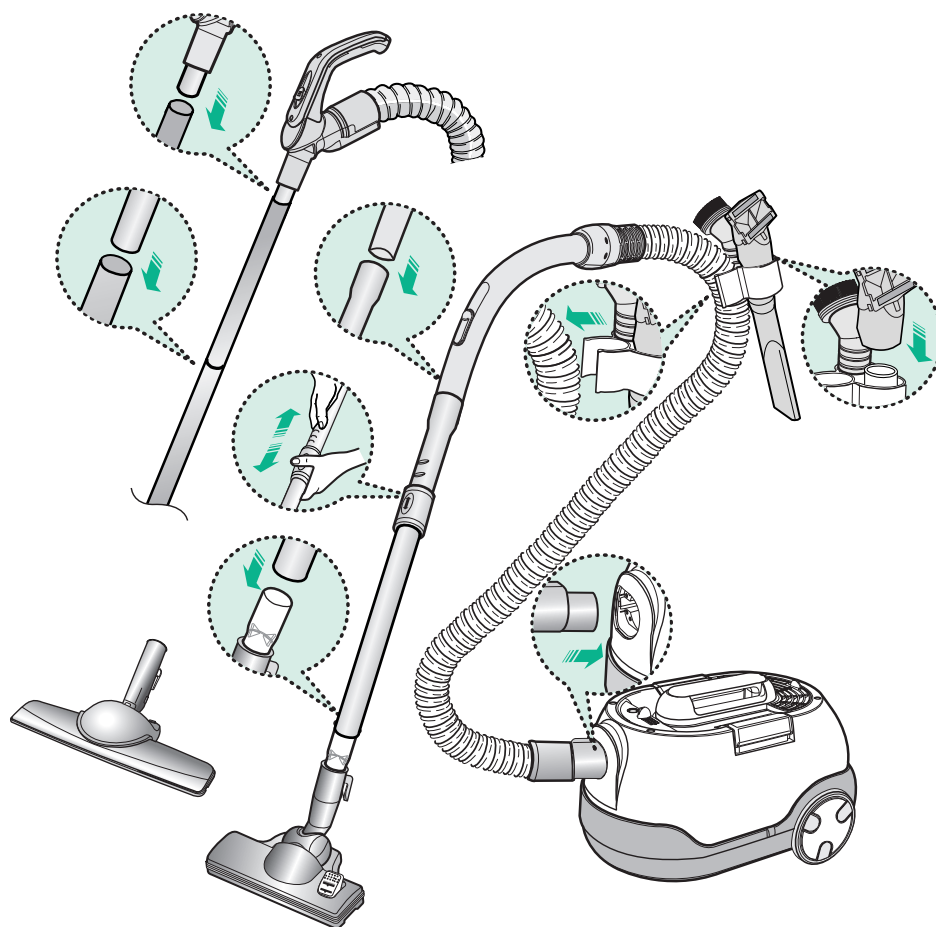



► Features may vary according to model.

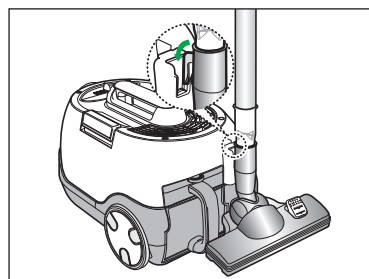


For storage, park the floor nozzle.

## 2 OPERATING THE CLEANER

### 2-1 POWER CORD

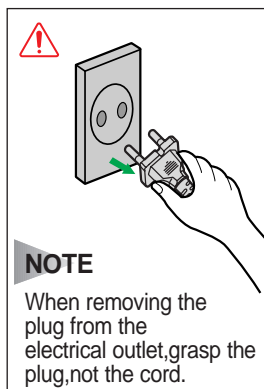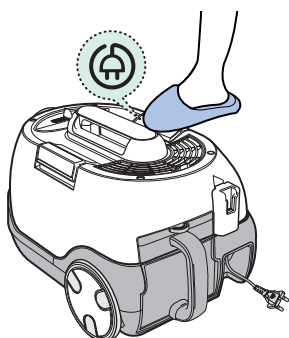


### 2-2 ON/OFF SWITCH

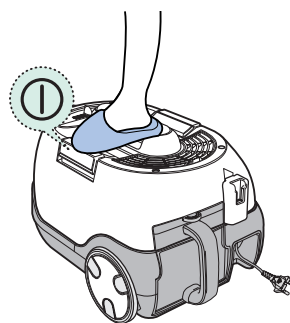


### 2-3 POWER CONTROL

- MIN** = For delicate fabrics, e.g. net curtains.  
**MAX** = For hard floors and heavily soiled carpets.

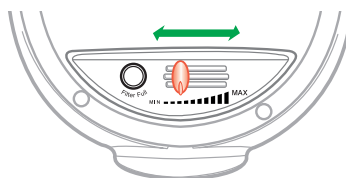


**BODY CONTROL TYPE ONLY**

- **SLIDE IN THE STOP POSITION**  
Vacuum-cleaner switches off (standby mode)
- **SLIDE TOWARDS MAX**  
Suction capacity increases steplessly up to max.

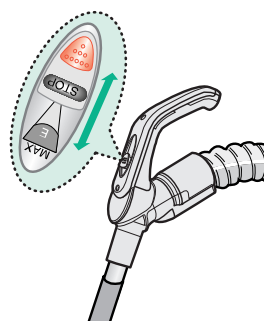

**HANDLE CONTROL TYPE ONLY**

## 2-4 USING FLOOR TOOLS

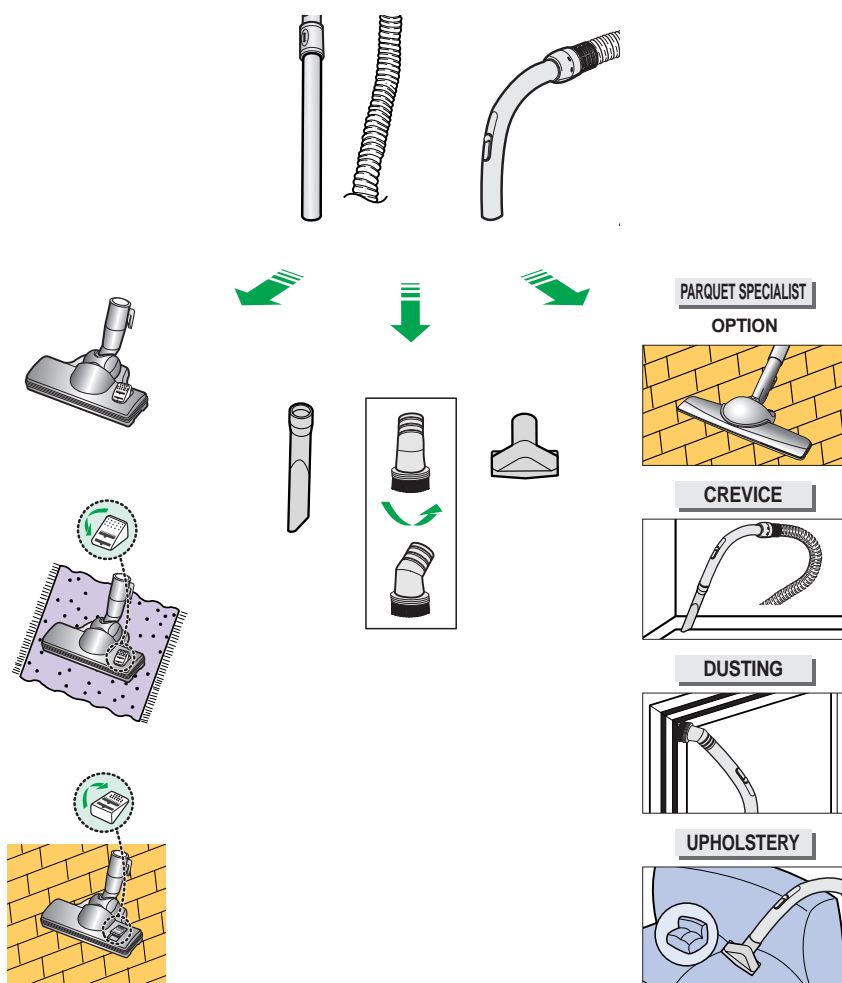


### - TRANSPARENT TUBE


The transparent tube prevents the tube and hose from being clogged by obstacle such as socks and cloth.

#### **When transparent tube is clogged.**

Separate the nozzle from the tube. Remove the alien substance with a stick from it. After cleaning it, reassemble the nozzle to the tube.





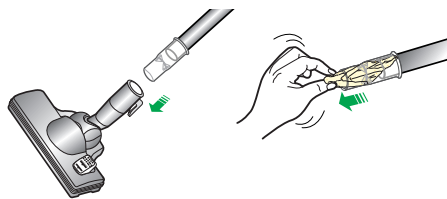


### 3 FILTER FULL INDICATOR

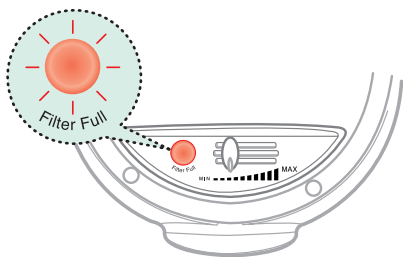



When the lamp is lighted, check the grille (3-2) and intermediate filter (3-3). And, clean those parts, according to the following guide.

#### 3-1 EMPYT THE DUST BIN

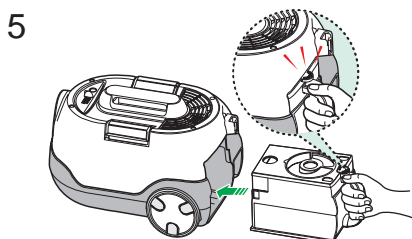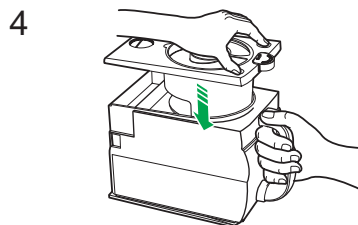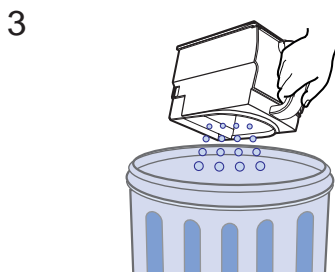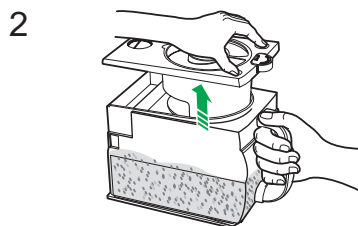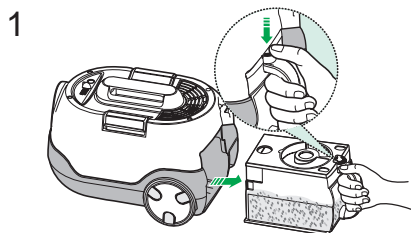


#### OPTIONAL

You can rinse the bin with water. Do not immerse the whole cleaner in water. Ensure completely dry before replacing.

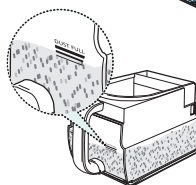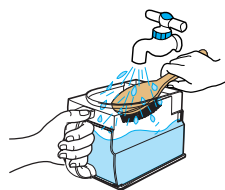


**NOTE :** Empty the dust bin before it is full in order to maintain the best efficiency.

### 3-2 CLEANING GLILLE

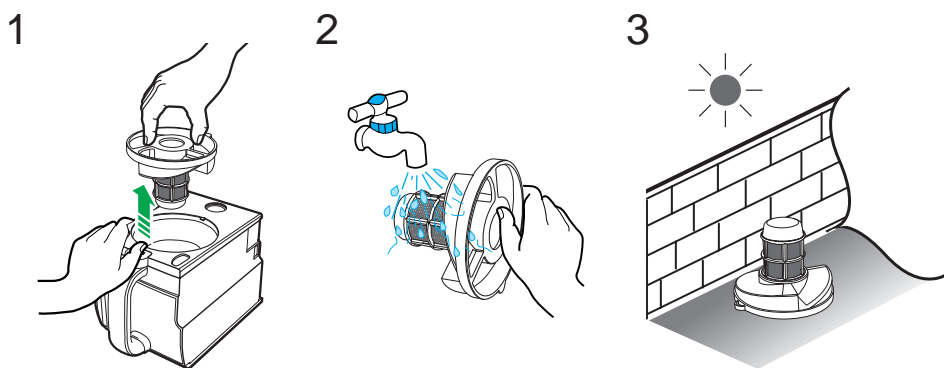


### 3-3 CLEANING THE HEPA FILTER

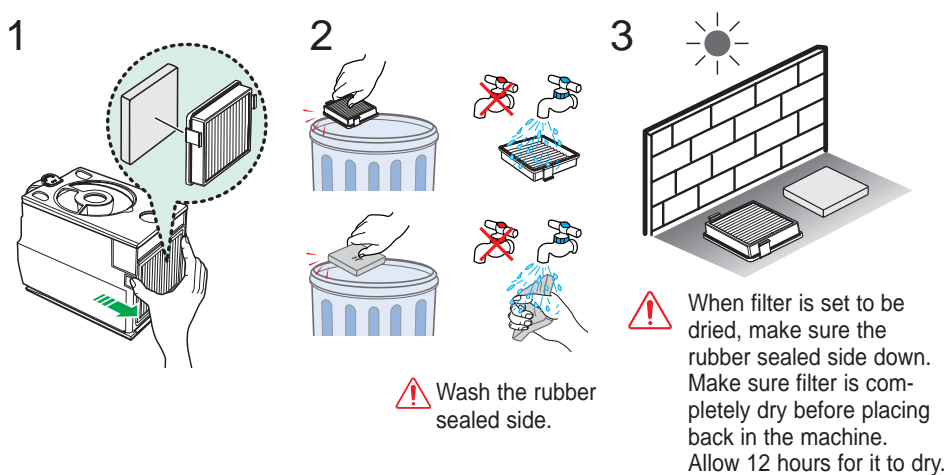

#### NOTE

- A HEPA-FILTER is expendable.
- You can buy a HEPA-FILTER as a replacement part at authorized samsung service center.

## 4 OUTLET FILTER

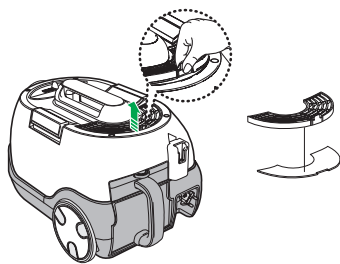

### - IF YOU HAVE A PROBLEM

PROBLEM	CAUSE	REMEDY
Motor dose not start.	No power supply. Thermal cut-out.	Check cable, plug and socket. Leave to cool.
Suction force is gradually decreasing	Nozzle, suction hose or tube is blocked.	Romove the object.
Cord dose not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner won't pick up dirt	Crack or hole in hose. Dust bin is not assembled properly.	Check hose and replace it if need. Position it correctly and lock in place.

## **IMPORTANT SAFEGUARDS**

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING:** Do not use the vacuum cleaner when rug or floor is wet.  
Do not use to suck up water.
3. Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
4. Do not use the vacuum cleaner without a dust bin. Empty the dust bin before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose. Do not block the suction or the exhaustion part.
7. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Grasp the plug to disconnect cord from the electrical outlet before changing the dust bag.
8. The plug must be removed from the socket out-let before cleaning or maintaining the appliance.
9. The use of an extension cord is not recommended.
10. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
11. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This Vacuum cleaner is approved the following.

EMC Directive : 89/336/EEC , 92/31/EEC and 93/68/EEC

Low Voltage Safety Directive : 73/23/EEC and 93/68/EEC